

Installing the 1 Line Printer Ink Cartridge

Note: This step only applies to TellerScan TS240s that have the optional 'Inkjet' configuration. Follow these instructions when installing the ink cartridge for the first time, or when replacing an empty cartridge.

Inkjet platform style might vary based on production. The cartridges are installed the same way for all TS240 1 line platform styles.

Step 1: Lift up on the 'Center Cover' to remove it and provide access to the 'Ink Cartridge Platform'.



Remove
Center Cover

Center
Cover



Inkjet
Platform

Step 2: Open the ink cartridge pouch and remove the protective tape covering the ink nozzles. Be careful not to touch the ink nozzle with your fingers or allow it to come in contact with anything else.



Remove
Tape Seal

Installing the 1 Line Printer Ink Cartridge (continued)

Step 3: Insert the nozzle end of the cartridge into the platform while keeping the end of the cartridge tilted slightly upward. Push down on the rear of the cartridge until it clicks twice and snaps into position.



Insert the
Ink Cartridge
at a slight angle

Nozzle end
slight angle




Push down on
the cartridge
to fully seat

Correctly
Inserted

Step 4: Verify that the cartridge is properly installed. The cartridge should appear tilted at a slight angle when fully seated. Replace the 'Center Cover' by setting it back on the unit vertically.


Note: If the scanner must be transported by common carrier from one place to another, or will experience extended periods of inactivity, it is advisable to remove the ink cartridge from the scanner and seal it in an airtight bag. If the cartridge has not been used for an extended period of time, it might be necessary to clean the inkjet nozzles by gently blotting them with a towel dampened with water.

Correctly Installed Ink Cartridge

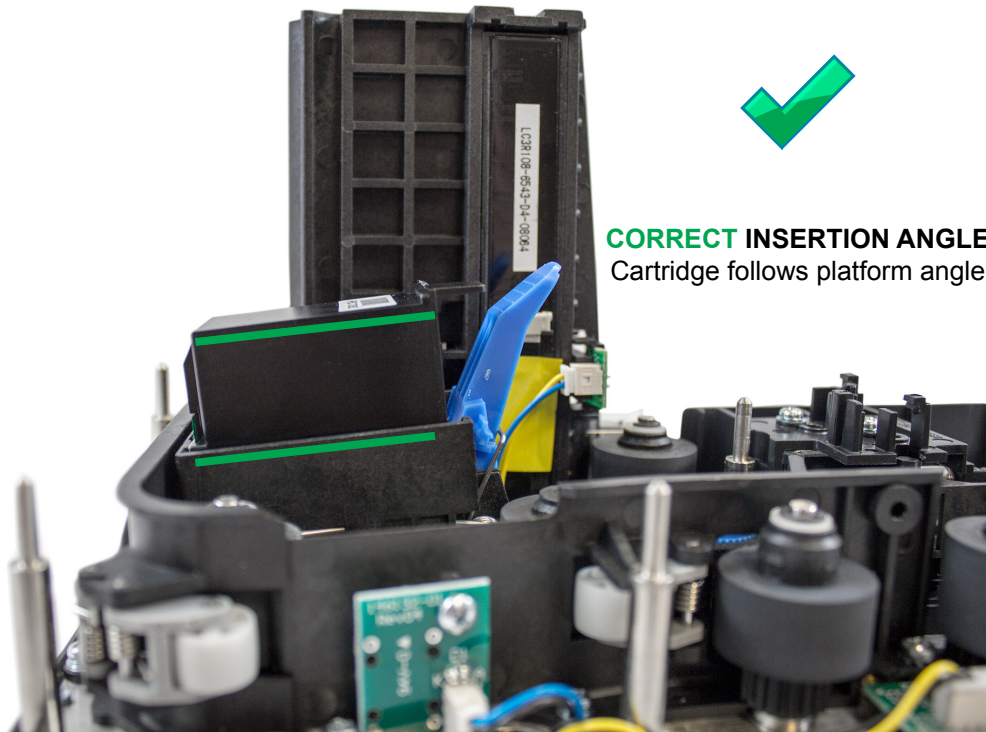

CORRECT INSERTION ANGLE
Cartridge follows platform angle

Incorrectly Installed Ink Cartridge

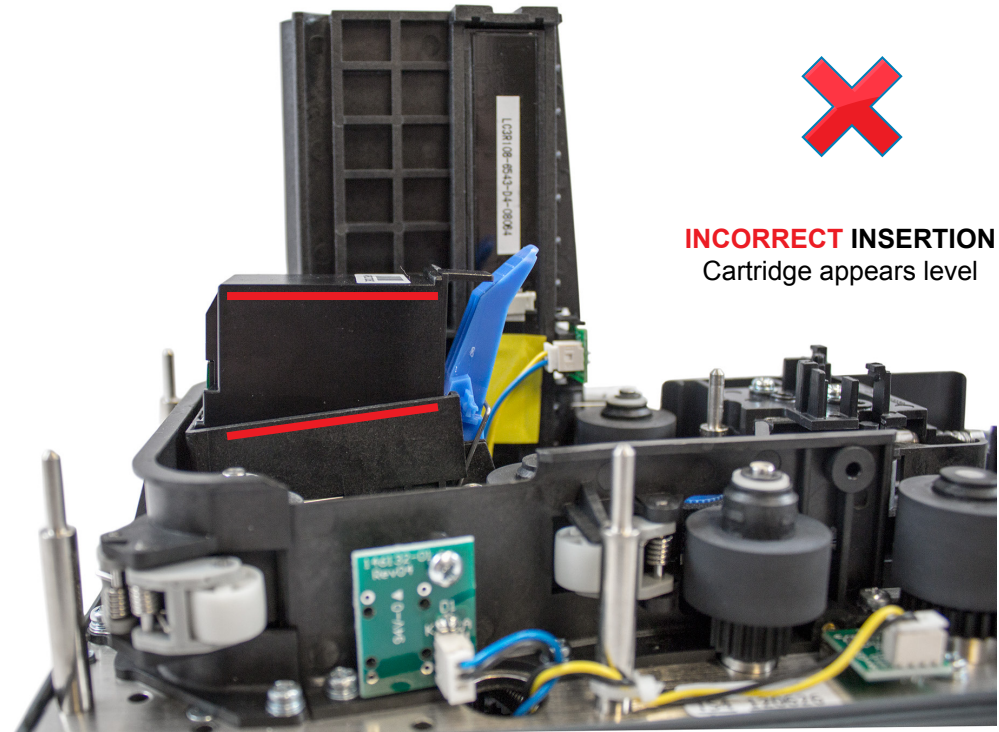

INCORRECT INSERTION
Cartridge appears level